

GOLD fren

®



cars

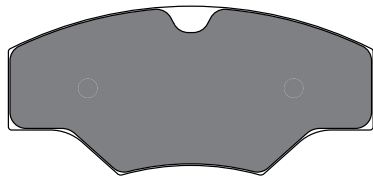
2022 **Disc Brake Pads**

Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER
1603

S3
ZNZ S3
ZNZ/K

113,4x52,5x15



AP RACING CALIPER -CP2340D51

ALCON

CITROËN SAXO

FRONT

PART NUMBER
1605

S3
ZNZ S3
ZNZ/K

132,3x56x20,3



AP CALIPER CP2279/CP3395/

CP3788/CP3789/CP3799

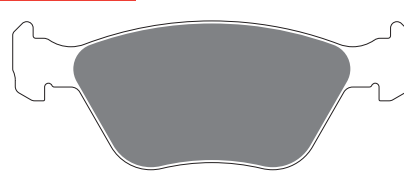
OPEL

FRONT

PART NUMBER
1606

S3
ZNZ S3
ZNZ/K

156x58x18



FORD

JAGUAR

OPEL

SAAB

VAUXHALL

FRONT

FRONT

FRONT

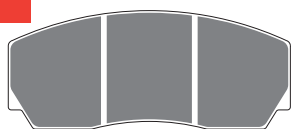
FRONT

FRONT

PART NUMBER
1608

S3
ZNZ S3
ZNZ/K

132,5x55,6x20



AC SUPERBOWLER

ALCON - PNF0084X245**/288**/331****

AP - CP3215D50

AP CALIPER CP3307/CP3434/CP3720/

CP4890/CP5000/CP5200

OPEL

LOTUS

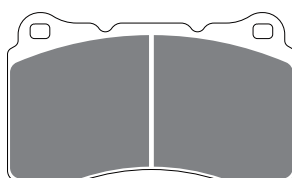
FRONT

FRONT

PART NUMBER
1610

S3
ZNZ S3
ZNZ/K

131,7x77,3x14,7



ALFA ROMEO

LANCIA

MITSUBISHI - TARMAC

SUBARU IMPREZA STI VERSION 7, WRX

FRONT

FRONT

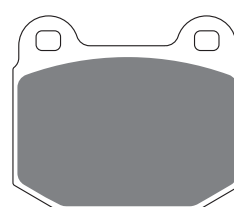
FRONT

FRONT

PART NUMBER
1611

S3
ZNZ S3
ZNZ/K

76,8x65,5x14,5



LOTUS

MITSUBISHI - TARMAC

SUBARU Impreza STI version7, WRX

FRONT

REAR

REAR

PART NUMBER
1612

S3
ZNZ S3
ZNZ/K

107,8x43x16



ISUZU

VAUXHALL

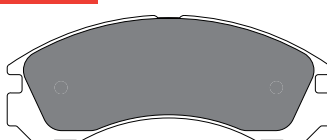
REAR

REAR

PART NUMBER
1613

S3
ZNZ S3
ZNZ/K

89,6x41,5x10



MITSUBISHI (gravel)

DODGE

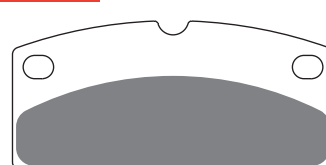
FRONT

FRONT

PART NUMBER
1614

S3
ZNZ S3
ZNZ/K

149,7x58,7x16



MICROCAR /01-

GRECAV

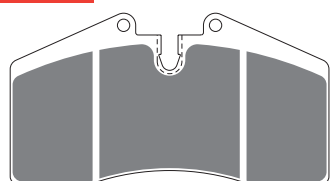
EIKE 505 A

PIAGGIO LIGIER NOVA /01-

PART NUMBER
1617

S3
ZNZ S3
ZNZ/K

129,8x70,5x18,5



PORSCHE

AUDI

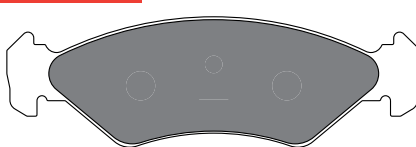
FRONT/REAR

FRONT

PART NUMBER
1618

S3
ZNZ S3
ZNZ/K

141,5x44,6x10




FORD

FRONT

PART NUMBER
1619

S3
ZNZ S3
ZNZ/K











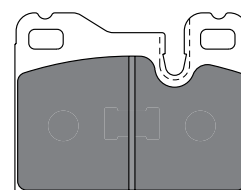
76x59,1x18,5














PORSCHE

REAR

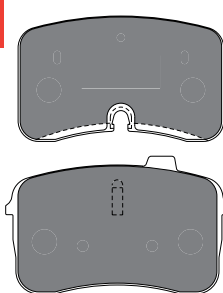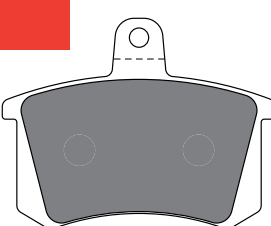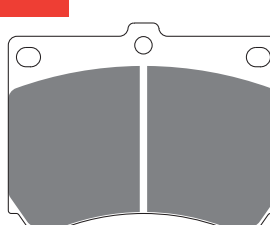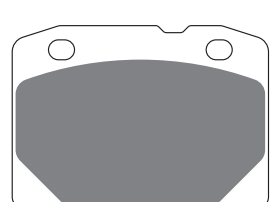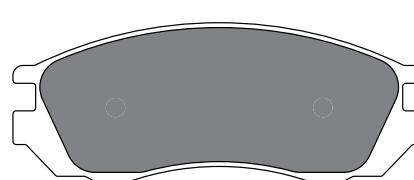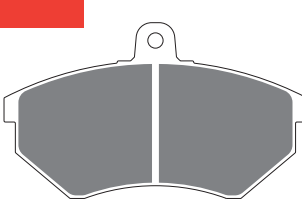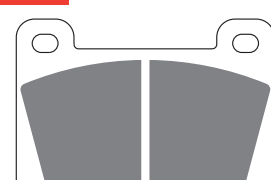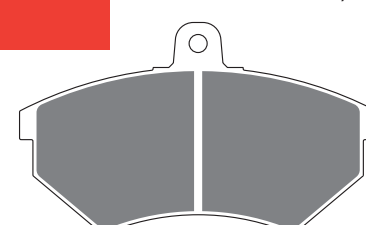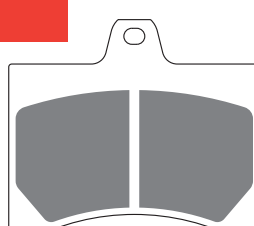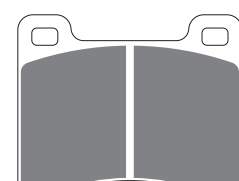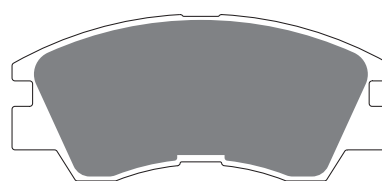Cars Brake Pads **GOLDfren** Catalogue













PART NUMBER 1620 100x65x16  AUDI FRONT	PART NUMBER 1621 87,3x67,1x16,5  VW REAR AUDI LANCIA ALFA	PART NUMBER 1622 102,4x39,2x14  MAZDA REAR
PART NUMBER 1623 91,6x66,6x11,8  SUMIMOTO JB KC80 FE F-FIS16D	PART NUMBER 1625 83,7x60x15,8  LADA FRONT	PART NUMBER 1626 127,3x51,2x16  NISSAN FRONT
PART NUMBER 1627 118,9x69x16  VW POLO 1.6 FRONT AUDI FRONT SEAT FRONT	PART NUMBER 1628 85x57x15  SKODA FRONT WARTBURG FRONT TATRA FRONT	PART NUMBER 1630 119x69x19,6  VW POLO FRONT SEAT FRONT VOLKSWAGEN FRONT
PART NUMBER 1631 84x74,10x14  CITROËN TATRA	PART NUMBER 1632 89,7x71,4x14  TATRA SKODA	PART NUMBER 1633 127,6x56,4x17  MITSUBISHI FRONT

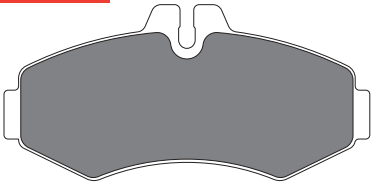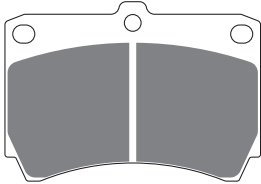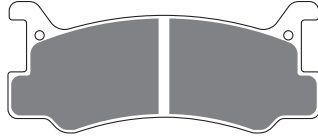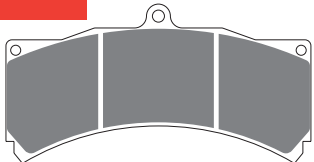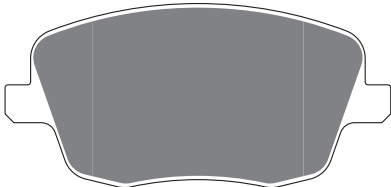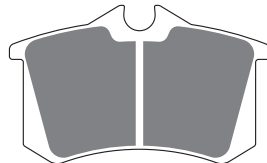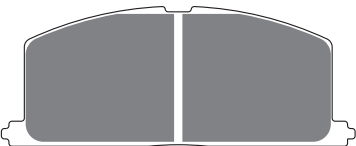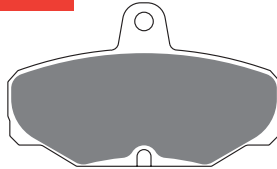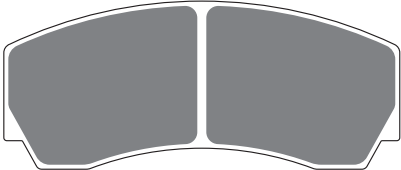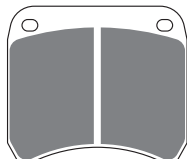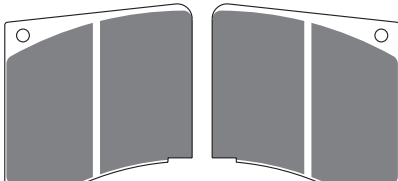Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER 1636  134,7x64,8x18 S3 ZNZ S3 ZNZ/K FRONT MERCEDES BENZ VITO - 2003	PART NUMBER 1637  91,6x64,3x14 S3 ZNZ S3 ZNZ/K FRONT MAZDA SAO PENZA AP CALIPER	PART NUMBER 1638  100,8x42,8x13,5 S3 ZNZ S3 ZNZ/K REAR MAZDA
PART NUMBER 1639  151,9x79,2x18 S3 ZNZ S3 ZNZ/K FRONT - AP - CP3558D46 - ALCON - PNF4489X534 - AP - CP3894D46 - AP CALIPER CP 3796/CP3894/CP3996/CP4090/CP4096 - AP CALIPER CP4098 - MITSUBISHI RALLY	PART NUMBER 1640  131,4x62,7x18 S3 ZNZ S3 ZNZ/K FRONT SKODA	PART NUMBER 1641  87,1x53x15 S3 ZNZ S3 ZNZ/K REAR PORSCHE RENAULT SEAT SKODA AUDI FORD MERCEDES BENZ PEUGEOT VOLKSWAGEN
PART NUMBER 1642  119,5x47,3x14,9 S3 ZNZ S3 ZNZ/K FRONT CHEVROLETE TOYOTA	PART NUMBER 1643  151,5x52,6x16 S3 ZNZ S3 ZNZ/K FRONT FERRARI FORD KIA TVR	PART NUMBER 1644  89,8x53,9x14,7 S3 ZNZ S3 ZNZ/K FRONT FORD MERCURY TVR
PART NUMBER 1645  131,9x56x16,8 S3 ZNZ S3 ZNZ/K FRONT AP Caliper	PART NUMBER 1646  59,3x51,7x11,9 S3 ZNZ S3 ZNZ/K FRONT FORMULA FORD AP	PART NUMBER 1647  125,7x58,6x16 S3 ZNZ S3 ZNZ/K FRONT ALCON CALIPER

Cars Brake Pads **GOLDfren** Catalogue

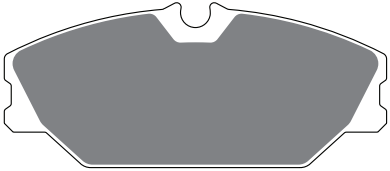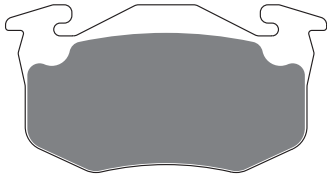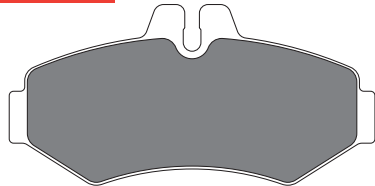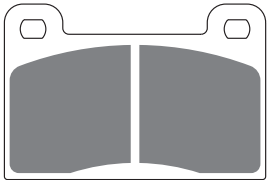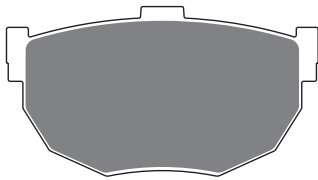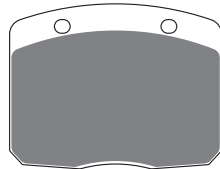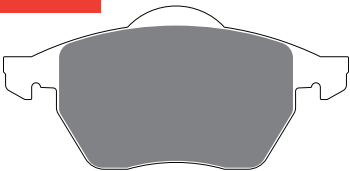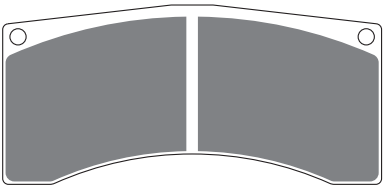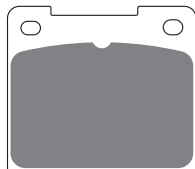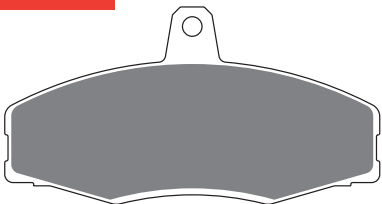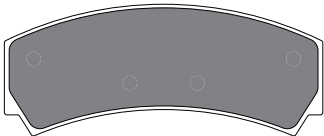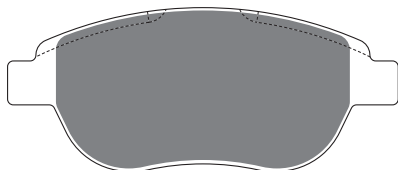®


PART NUMBER 1648 129,4x55,8x18 S3 ZNZ S3 ZNZ/K  RENAULT - CLIO RS FRONT	PART NUMBER 1649 105,3x55x15 S3 ZNZ S3 ZNZ/K  RENAULT - CLIO RS REAR PEUGEOT	PART NUMBER 1650 126,1x62,3x16 S3 ZNZ S3 ZNZ/K  MERCEDES BENZ SPRINTER REAR
PART NUMBER 1651 84,8x57x15 S3 ZNZ S3 ZNZ/K  TATRA REAR	PART NUMBER 1652 85,5x46,5x15 S3 ZNZ S3 ZNZ/K  HYUNDAI REAR	PART NUMBER 1653 70x54,5x14 S3 ZNZ S3 ZNZ/K  ROVER FRONT VAUXHALL REAR
PART NUMBER 1656 156,4x74x19 S3 ZNZ S3 ZNZ/K  AUDI FRONT FORD FRONT SEAT FRONT SKODA FRONT VW FRONT	PART NUMBER 1659 131x62x15,8 S3 ZNZ S3 ZNZ/K  BREMBO ALCON	PART NUMBER 1660 63,3x55,2x14,5 S3 ZNZ S3 ZNZ/K  CITROEN REAR
PART NUMBER 1661 115x60,5x17 S3 ZNZ S3 ZNZ/K  SKODA FRONT	PART NUMBER 1662 132,4x55x17 S3 ZNZ S3 ZNZ/K  MARI-DESIGN	PART NUMBER 1663 137x52,4x18 S3 ZNZ S3 ZNZ/K  FIAT FRONT

Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER
1664
131,3x42,5x16,8

S3
ZNZ

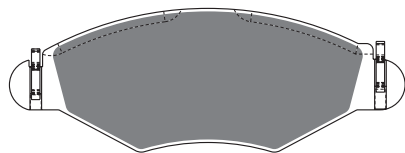S3
ZNZ/K




CITROËN FRONT/REAR
PEUGEOT FRONT

PART NUMBER
1665
79,5x51x21

S3
ZNZ

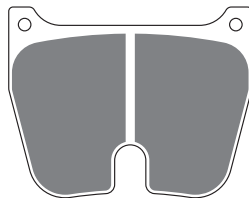S3
ZNZ/K




BREMO

PART NUMBER
1666
130x53x19

S3
ZNZ

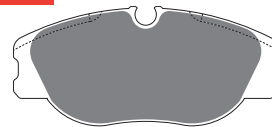S3
ZNZ/K




ALFA ROMEO	FRONT
CITROËN	FRONT
FIAT	FRONT
LANCIA	FRONT
PEUGEOT	FRONT
RENAULT	FRONT
RENAULT ALPINE	FRONT

PART NUMBER
1667
107,5x43x15,3

S3
ZNZ

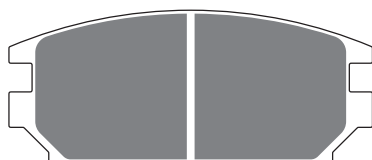S3
ZNZ/K




MITSUBISHI - gravel REAR

PART NUMBER
1669
113,6x53x16

S3
ZNZ

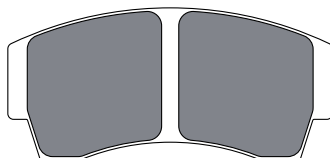S3
ZNZ/K




PEUGEOT 206	FRONT
ALCON	
AP CALIPER	
SUBARU 2006	REAR

PART NUMBER
1670
84x63,4x14

S3
ZNZ

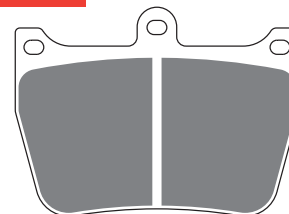S3
ZNZ/K




AP-CP5148D46
ŠKODA REAR

PART NUMBER
1671
73,2x36x15

S3
ZNZ

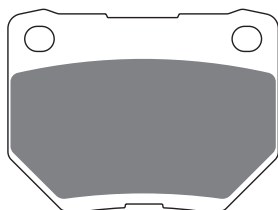S3
ZNZ/K




SUBARU IMPREZA (GRAVEL) REAR

PART NUMBER
1672
104,8x43,5x11

S3
ZNZ

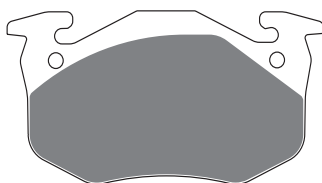S3
ZNZ/K




PEUGEOT	FRONT
CITROËN	FRONT

PART NUMBER
1673
105x43x18

S3
ZNZ

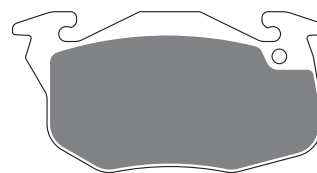S3
ZNZ/K




CITROËN	FRONT
PEUGEOT	FRONT
RENAULT	FRONT
RENAULT ALPINE	REAR

PART NUMBER
1674
119,1x47,7x14,5

S3
ZNZ

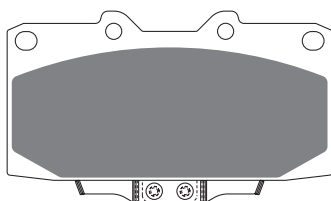S3
ZNZ/K




NISSAN	FRONT
SUBARU IMPREZA (GRAVEL)	FRONT

PART NUMBER
1675
119,1x47,7x14,5

S3
ZNZ

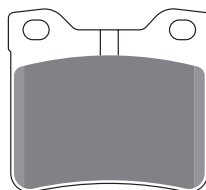S3
ZNZ/K




PEUGEOT	REAR
CITROËN	REAR

PART NUMBER
1677
132,4x55x17












S3
ZNZ

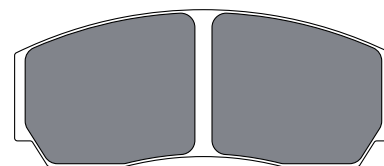S3
ZNZ/K















MARI DESIGN	
SUBARU 2006	FRONT

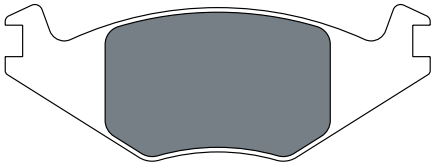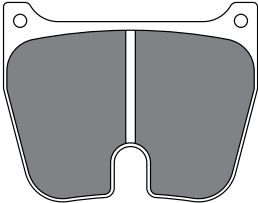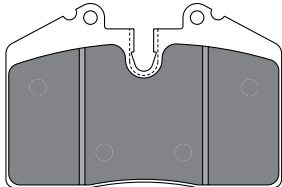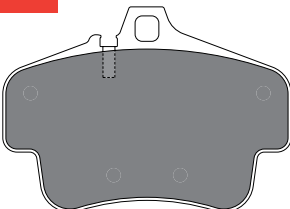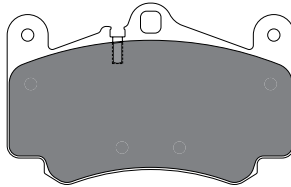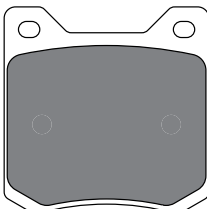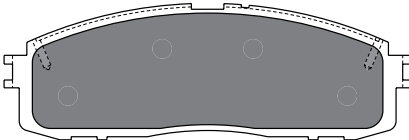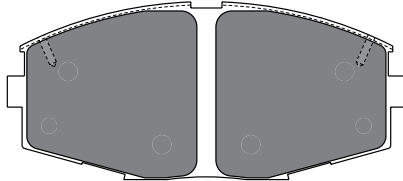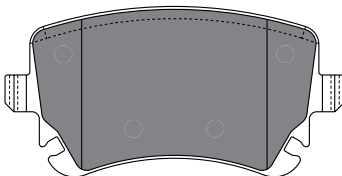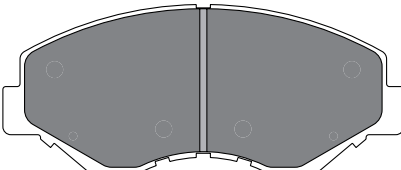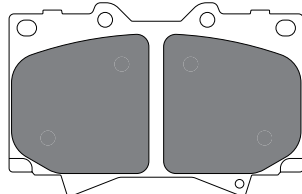Cars Brake Pads **GOLDfren** Catalogue










PART NUMBER 1678 137,5x45x17  SEAT VW FRONT FRONT	PART NUMBER 1679 79,5x51x17,5  BREMBO	PART NUMBER 1680 113,6x39x17  MARI DESIGN
PART NUMBER 1681 97,7x65,3x16  PORSCHE FERRARI REAR REAR	PART NUMBER 1683 121,3x86,3x14  PORSCHE	PART NUMBER 1684 140,1x88,5x16  PORSCHE
PART NUMBER 1685 63,4x64,2x16,5  ŠKODA 130 RS RENAULT PEUGEOT FRONT FRONT FRONT	PART NUMBER 1686 125,3x42x15  TOYOTA REAR	PART NUMBER 1687 125,3x56x15  TOYOTA FRONT
PART NUMBER 1688 116x52x17  AUDI REAR	PART NUMBER 1690 141,6x59x18  HONDA FRONT	PART NUMBER 1691 119,5x78,4x18  TOYOTA FRONT

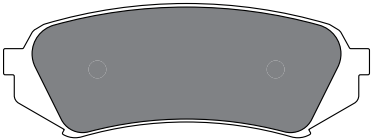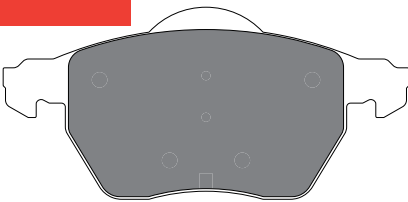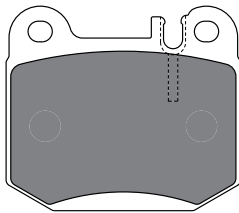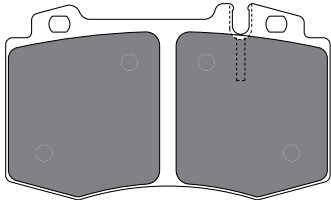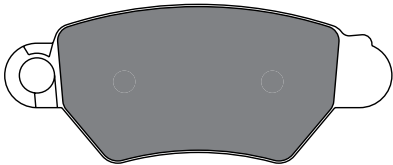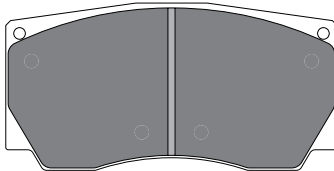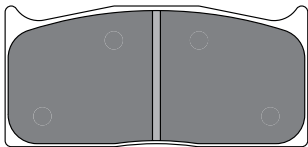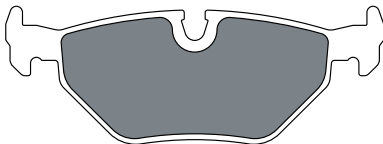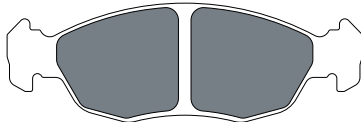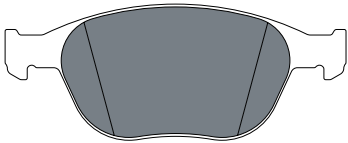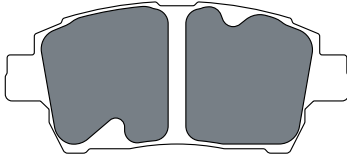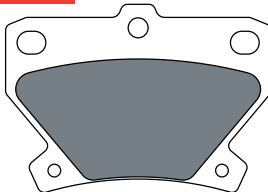Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER 1692 123,2x45,2x17  TOYOTA REAR	PART NUMBER 1693 156,3x74x19  ŠKODA FRONT	PART NUMBER 1694 75x65,4x15  MERCEDES REAR
PART NUMBER 1695 118x70,8x15  MERCEDES FRONT	PART NUMBER 1696 104,6x42,9x16  OPEL REAR VAUXHALL REAR	PART NUMBER 1699 139,6x70x18  mitsubishi FRONT
PART NUMBER 1700 99,6x46,3x18,6  MITSUBISHI REAR	PART NUMBER 1702 123x43,7x14,5  BMW REAR	PART NUMBER 1703 141,4x47,4x17  CITROËN FRONT PEUGEOT FRONT
PART NUMBER 1705 156,45x62,5x16  FORD FIESTA FRONT	PART NUMBER 1706 116,2x51,2x16  TOYOTA FRONT	PART NUMBER 1707 78,4x49,3x14  TOYOTA REAR

Cars Brake Pads **GOLDfren** Catalogue

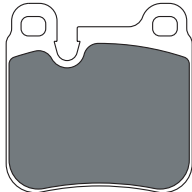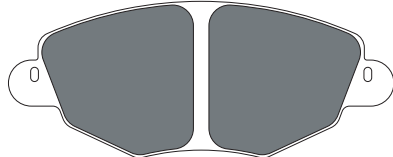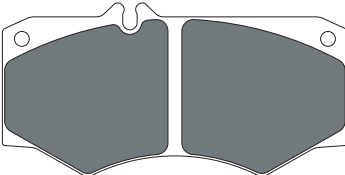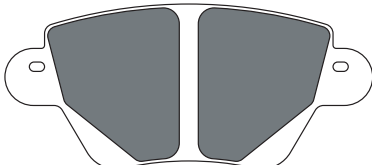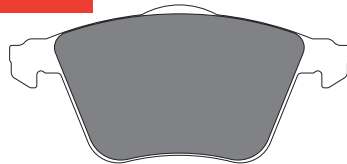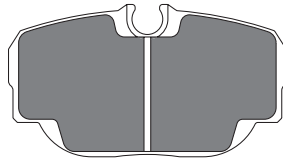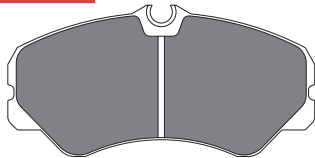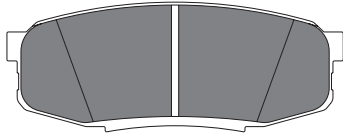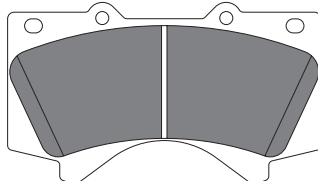®

PART NUMBER 1708  178x58,55x16 S3 ZNZ S3 ZNZ/K FORD FRONT	PART NUMBER 1711  63,7x64,8x7,6 S3 ZNZ S3 ZNZ/K PORSCHE 911 C2 /1990 REAR	PART NUMBER 1712  149x60,5x14 S3 ZNZ S3 ZNZ/K FORD MONDEO /2001-2006 FRONT
PART NUMBER 1713  148,8x68,9x18 S3 ZNZ S3 ZNZ/K TAROX CALIPER	PART NUMBER 1714  116x52x10,7 S3 ZNZ S3 ZNZ/K FORD MONDEO /2001-2006 REAR	PART NUMBER 1731A  156x72,6x18 S3 ZNZ S3 ZNZ/K AUDI ALLROAD QUATRO 03-06 FRONT AUDI A6 2.5 TD 2000-05 FRONT AUDI QUATRO AVANT 2.5TD 98-2003 FRONT AUDI QUATRO 2.5TD 2001-04 FRONT AUDI QUATRO AVANT 3.0 01-04 FRONT
PART NUMBER 1731B  156x72,6x18 S3 ZNZ S3 ZNZ/K AUDI ALLROAD QUATRO 03-06 FRONT AUDI A6 2.5 TD 2000-05 FRONT AUDI QUATRO AVANT 2.5TD 98-2003 FRONT AUDI QUATRO 2.5TD 2001-04 FRONT AUDI QUATRO AVANT 3.0 01-04 FRONT	PART NUMBER 1732  125,25x36,6x14 S3 ZNZ S3 ZNZ/K BMW 3 E30 REAR BMW 5 E28 REAR BMW 728 E23 82-86 REAR BMW Z1 88-90 REAR	PART NUMBER 1733  94,7x51,9x15 S3 ZNZ S3 ZNZ/K BMW 3 E30 FRONT BMW Z1 88-92 FRONT
PART NUMBER 1734  145x71,5x15 S3 ZNZ S3 ZNZ/K FIAT DUCATO 87-94 FRONT FIAT DUCATO MAXI 88-94 FRONT CITROEN C25 (1,8 TON) 81-94 FRONT PEUGEOT J5 (1,8 TON) 81-94 FRONT TALBOT EXPRES 81-94 FRONT	PART NUMBER 1735  116,2x43x15 S3 ZNZ S3 ZNZ/K TOYOTA LANDCRUISER 4,5 TD 2008- REAR	PART NUMBER 1736  144x83,5x17,6 S3 ZNZ S3 ZNZ/K TOYOTA LANDCRUISER 4,5 TD 2008- FRONT

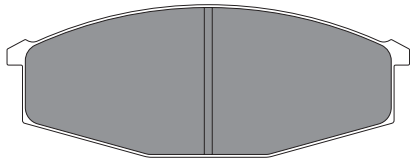
Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER

1737

141,9x53,8x16

S3
ZNZ S3
ZNZ/K




NISSAN PATROL 2.8, 3.0, 3.3 82-92 FRONT
NISSAN PATROL 2.8TD 96-98 FRONT
NISSAN PATROL 4.2TD 93-98 FRONT

PART NUMBER

1738

169,2x69,3x19

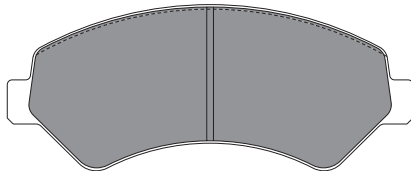S3
ZNZ S3
ZNZ/K




FIAT DUCATO 06- FRONT
PEUGEOT BOXER 06- FRONT
CITROEN RELAY/JUMPER 06- FRONT

PART NUMBER

1739

88,9x35,1x14

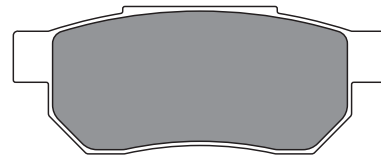S3
ZNZ S3
ZNZ/K




HONDA PRELUDE 85-87 REAR
HONDA INTEGRA 86-91 REAR
HONDA ACCORD AREODECK 85-90 REAR
HONDA ACCORD 2.0 85-90 REAR
HONDA CIVIC 1.6 89-91 REAR
HONDA CIVIC 2.0TD 97-99 REAR
HONDA CIVIC 1.6 COUPE 99-2001 REAR
HONDA CRX 87-92 REAR
HONDA INTEGRA 1.6 85-2001 REAR
HONDA JAZZ REAR
HONDA PRELUDE 2.0 88-92 REAR
MG REAR
ROVER REAR

PART NUMBER

1740

145x62x17,5

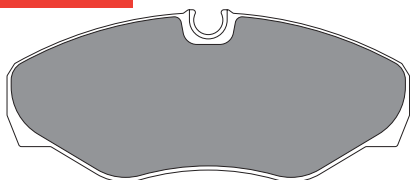S3
ZNZ S3
ZNZ/K




NISSAN PRIMASTAR 2002- FRONT
OPEL VIVARO 2001- FRONT
RENAULT TRAFIC 2001- FRONT
VAUXHAL VIVARO 2001- FRONT

PART NUMBER

1741

155x68,5x20

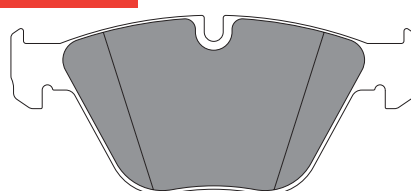S3
ZNZ S3
ZNZ/K




BMW Z4 3.0 (E89) 09- FRONT
BMW 335 06- FRONT
BMW 330 E90,E91,E92,E93 FRONT

PART NUMBER

1742

168,2x63,95x18

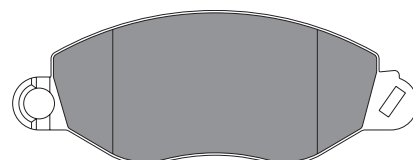S3
ZNZ S3
ZNZ/K




FORD TRANSIT 2000-06 15" WHEELS FRONT

PART NUMBER

1743

177x59x18,3

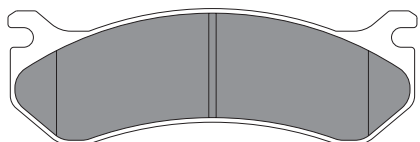S3
ZNZ S3
ZNZ/K




CHEVROLET SILVERADO REAR

PART NUMBER

1744

216x66x18,3

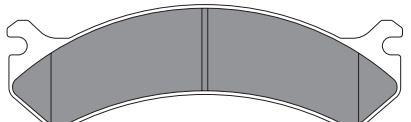S3
ZNZ S3
ZNZ/K




CHEVROLET SILVERADO FRONT

PART NUMBER

1745

105,4x55,7x15

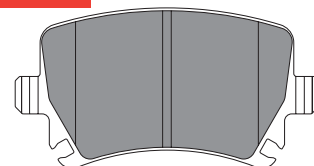S3
ZNZ S3
ZNZ/K




AUDI A6 2.4 2004- REAR
AUDI A3 QUATRO 2.0TD 2004-07 REAR
AUDI A3 CABRIOLET 1.8 T 2008- REAR
SKODA OCTAVIA 1.8T 07- REAR
SKODA OCTAVIA 2.0TD 04- REAR
SKODA SUPERB 1.4T,1.8T,1.9TD 08-REAR
SKODA YETI REAR
VW CADDY LIFE 2004- REAR
VW GOLF REAR
VW JETTA 2.5, 1.9TD, 2.0TD 2005- REAR
VW TOURAN 2003- REAR

PART NUMBER

1748

119,8x54x15

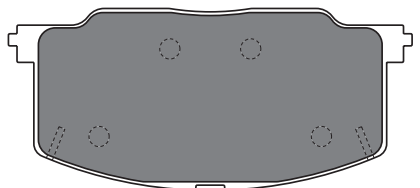S3
ZNZ S3
ZNZ/K




TOYOTA CELICA CARLOS SAINZ FRONT

PART NUMBER

1749

162,3x67,3x15,5

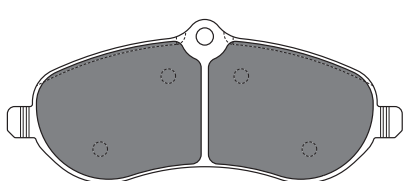S3
ZNZ S3
ZNZ/K




FIAT SCUDO FRONT

PART NUMBER

1750

139,4x58,7x15,5

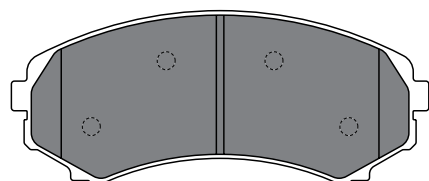S3
ZNZ S3
ZNZ/K














MITSUBISHI PAJERO FRONT









Best Quality Pads

www.goldfren.cz

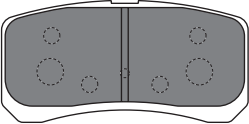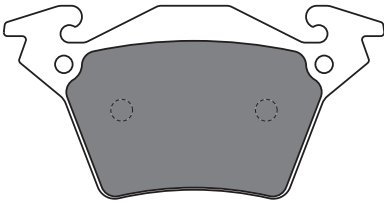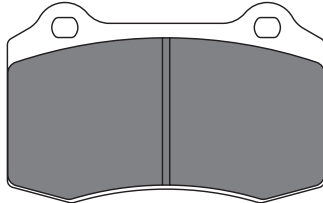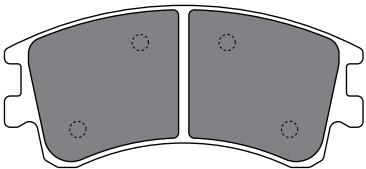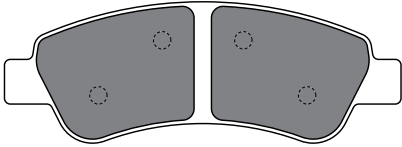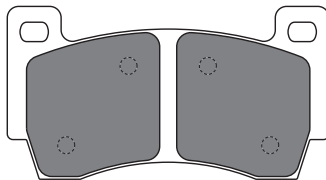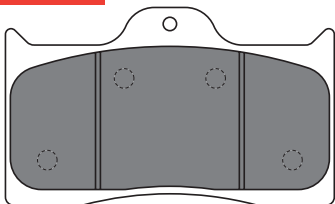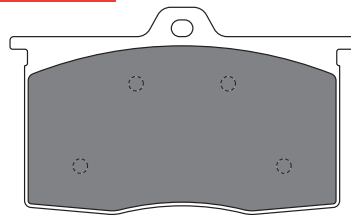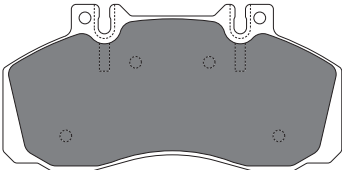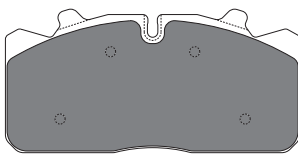Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER 1751 S3 ZNZ S3 ZNZ/K 111,4x44,6x15,5 A  B  MITSUBISHI PAJERO REAR	PART NUMBER 1753 S3 ZNZ S3 ZNZ/K 105,2x53,39x17,9  MERCEDES-BENZ VITO	PART NUMBER 1754 S3 ZNZ S3 ZNZ/K 109,7x69,2x15  KTM X-BOW F0RN
PART NUMBER 1756 S3 ZNZ S3 ZNZ/K 132,1x59,7x18  MAZDA 6	PART NUMBER 1757 S3 ZNZ S3 ZNZ/K 136,75x48,76x19  FIAT DUCATO REAR CITROEN JUMPER REAR FIAT DUCATO REAR PEUGEOT BOXER REAR	PART NUMBER 1758 S3 ZNZ S3 ZNZ/K 113,6x61x14  AP RACING CALIPER
PART NUMBER 1759 S3 ZNZ S3 ZNZ/K 169,09x61,59x19  FIAT DUCATO FRONT CITROEN JUMPER FRONT PEUGEOT BOXER FRONT	PART NUMBER 1760 S3 ZNZ S3 ZNZ/K 100,6x60,5x12,4  WILWOOD CALIPER FRONT+REAR	PART NUMBER 1761 S3 ZNZ S3 ZNZ/K 142x85,5x15  BMW M1 OLDTIMER FRONT
PART NUMBER 1762 S3 ZNZ S3 ZNZ/K 174,9x85,9x21,2  IVECO EUROCARGO FRONT	PART NUMBER 1763 S3 ZNZ S3 ZNZ/K 220,2x55,9x18,7  FORD F350 FRONT	PART NUMBER 1764 S3 ZNZ S3 ZNZ/K 175x85,07x22  IVECO EUROCARGO +7,5T FRONT

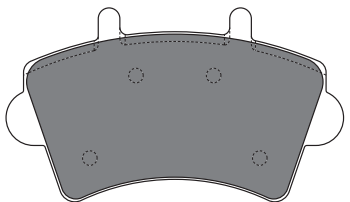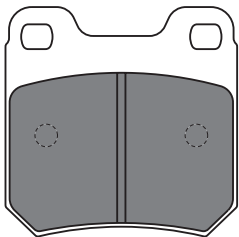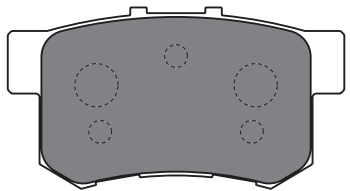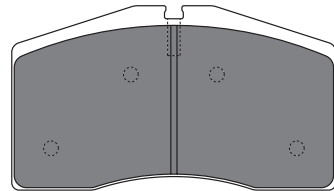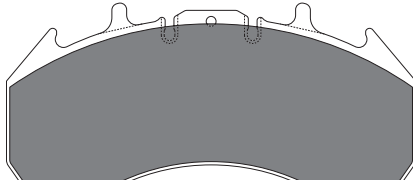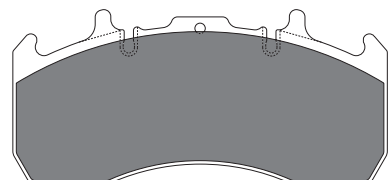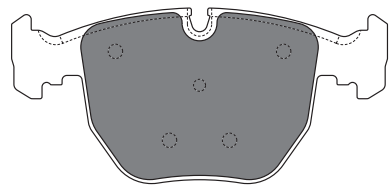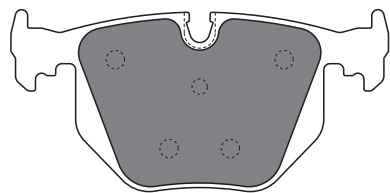Cars Brake Pads **GOLDfren** Catalogue

PART NUMBER 1765  RENAULT MASTER	S3 ZNZ S3 ZNZ/K PART NUMBER 1767  OPEL OMEGA	PART NUMBER 1769  HONDA CR-V REAR
PART NUMBER 1772  AUDI AVANT AUDI S6 PORSCHE 911	S3 ZNZ S3 ZNZ/K PART NUMBER 1773  VOLVO FH13 FRONT	PART NUMBER 1774  VOLVO FH13 REAR
PART NUMBER 1781  BMW FRONT	S3 ZNZ S3 ZNZ/K PART NUMBER 1782  BMW REAR	

Návod na montáž nového brzdového obložení pro závodní auta

- Ověřte správnou volbu obložení u prodejce (typ a rok výroby vozidla).
- Brzdové obložení je nutno vyměnit, jakmile tloušťka brzdové plochy klesne pod 2 mm.
- Brzdové plochy je nutné chránit před mastnotou, oleji a jinými chemickými látkami.
- Před montáží nového brzdového obložení je třeba očistit a odmastit brzdové kotouče.
- Poškozené kotouče je nutné vyměnit, protože snižují brzdný účinek obložení a zároveň se tím snižuje délka jeho životnosti.
- Namontujte obložení brzdovou plochou k brzdovému kotouči. Při montáži zkontrolujte, zda je obložení správně namontováno a zajištěno.
- Pokud nemáte dostatek zkušeností, svěřte výměnu brzdového obložení odbornému servisu.
- Materiál sintrovaných brzdových destiček Goldfren je nezávadný pro životní prostředí.

Zajištění nového brzdového obložení

Správný způsob zajištění nového brzdového obložení je základním předpokladem pro jejich dlouhou životnost a správný účinek brzd. Je-li možné, tak během zajištění nového obložení nemontujte na vozidlo žádné nové brzdové kotouče.

Pokud se na starých brzdových kotoučích jezdilo dříve s jiným materiálem obložení, doporučuje se očistit kotouče brusným papírem. Brzdová obložení musí po namontování sedět volně a bez přílišného sevření v brzdě.

Po rozjetí zabrzdíte vozidlo několikrát při pomalejší rychlosti, aby se vytvořila 80 až 90 procentní kontaktní plocha mezi brzdovým obložением a brzdovým kotoučem. Po několika zabrzdění při vyšší rychlosti by se mělo nechat obložení za jízdy zchladit. Následně je možno brzdová obložení používat běžným způsobem.

How to fit new automotive racing brake pads

- Check if you purchased correct brake pads that correspond to your vehicle type and model.
- Brake pads must be replaced in the moment when the thickness of braking surface decreases under 2 mm.
- Braking surface must be protected against grease, oil and other chemical substances.
- It is necessary to clean and degrease brake discs before fitting new brake pads.
- Damaged brake discs must be replaced. Damaged brake discs decrease braking efficiency of the brake pads and their lifetime.
- Fit brake pads with the braking surface facing the brake disc. Make sure that brake pads were mounted correctly.
- If you have no experience, get your brake pads replaced by a professional.
- GOLDfren sintered material is eco-friendly.

How to run in new brake pads

Right way of running in new brake pads is the basic precondition for their long lifetime and braking efficiency. If possible, do not fit any new brake discs while running in new brake pads.

If brake discs were used together with brake pads made of different material, it is recommended to clean brake discs with sandpaper first. Brake pads must be mounted freely, brake caliper should not hold them too tight.

After setting your vehicle in slow motion, brake several times as much as braking contact area between brake pads and brake disc (approx. 80-90% large) is created. After a few brakings during faster motion, let the brake pads cool down during driving. Brake pads can be afterwards used normally.

SPACEK PRODUCT

Poběžovice 29, 534 01 Holice,
Czech Republic

Tel.: +420 466 682 065

Tel.: +420 466 009 452

Fax: +420 466 682 027

E-mail: goldfren@goldfren.com

Distributed by



www.goldfren.com